 


# LYNX500

[www.hirecworld.com](http://www.hirecworld.com)

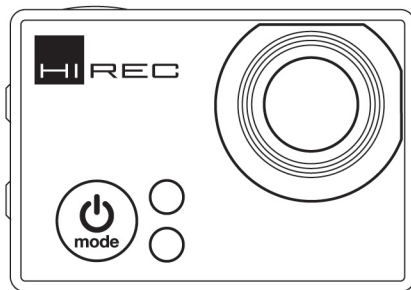 






## USER MANUAL

*English*

## *Introduction to appearance and keys*

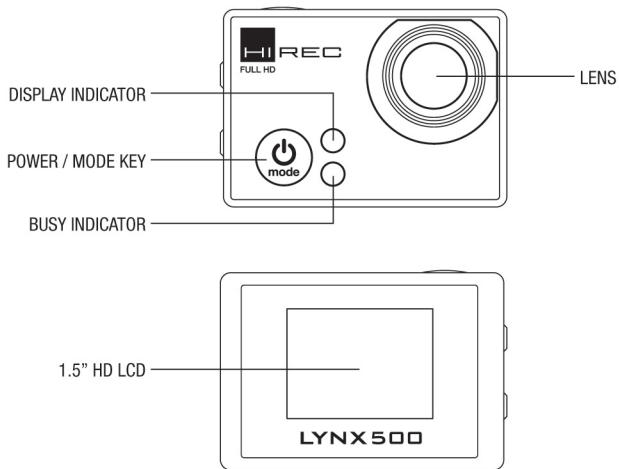


---

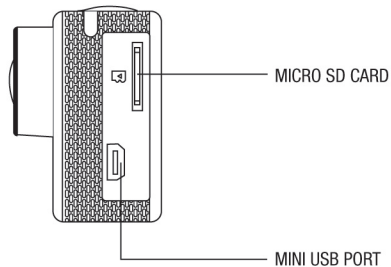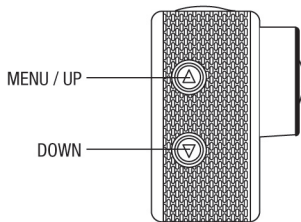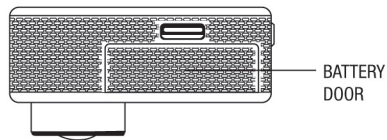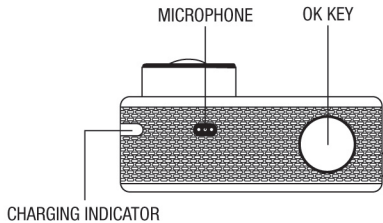    



## Select Language

 
---

1. Start the camera  press the Menu / Up Key 
2. Press mode key
3. Navigate in setting menu  and select your language

## Start using

---

### 1.Charge the built-in Lithium battery

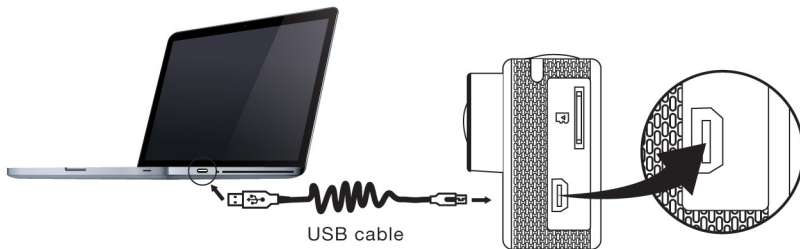


Connect the camera to the computer for charging, at this time, the charging indicator will be in red, and it will be off after charging. Generally, it takes 3-5 hours to charge the battery.

## 2. Use the storage card

 2.1. Push the TF card into the slot till it is in place as per the instruction in concavely engraved words by the storage card slot.


2.2. To take out the TF card, press the tab of the storage card inwardly softly and it will be popped out.

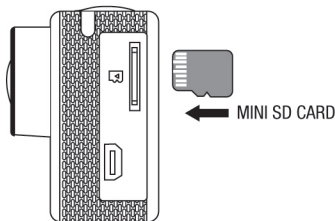

NOTE: There's no built-in memory unit in the camera, so make sure to insert a storage card into it prior to use ( it is recommended that a TF card of better quality be used, like as class 4 speeds or better card ).



### 3.Power ON/OFF

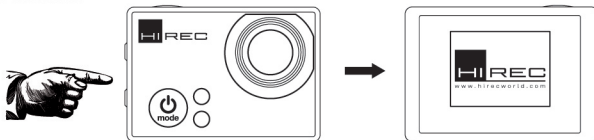 3.1.Power ON: Press Power key for 1 second, the screen will be ON, and the camera will be started.



3.2.Power OFF: Hold on Power key for 3 seconds when the camera is in the idle state to turn it off.

3.3.Auto Screen OFF: The screen will be turned off automatically when the time that the camera is in the idle state for automatic screen off to save the power.

3.4.Power off when the camera is lack of electricity. When electricital quantity of the battery is very low, an icon of  will be displayed on the LCD screen, prompting you to charge it in time. When the icon of  will be displayed on the LCD screen, the camera will be turned off automatically.

### 4.Shift among functional modes

The camera has 4 modes: namely video recording mode / shooting mode / replay mode / car-carrying mode. After power is on, press Power key to shift among them.

### 5.Indicator

Busy indicator (red): when the camera is busy such as recording videos, shooting photos the work indicator will flicker.

Display indicator (red): when the LCD screen is off, the display indicator is on; when the LCD screen is off, the display indicator is on.

 
Charging indicator (red): when it is on, the user is prompted that the camera is being charged and it will be off after charging is completed.

## 6.Video recording mode

After power is on, press Power key to enter video recording mode and in preview mode, press OK key to start video recording; Press it again to stop shooting.

If the memory card is full or electrical quantity is low, it will also stop shooting:


1. Icon of mode, indicating video recording mode
2. Indicate size of video: HD 720P (1280x720p)  
/ VGA 640P (640x480p) is optional
3. Recording time, indicating recordable length of time
4. Icon of TF, indicating TF card is inserted
5. Icon of battery, indicating current electrical quantity

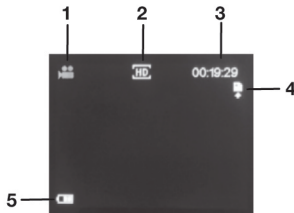

## 7. Shooting mode

After power is on, press Power key twice to enter shooting mode, and in preview state, press OK key to take a photo:

 1. Icon of mode, indicating the current is shooting mode
2. Size of video, and 5M/8M/10M/12M is optional
3. Counter, indicating number of photos to be taken
4. Icon of TF, indicating TF card is inserted
5. Icon of battery, indicating current electrical quantity

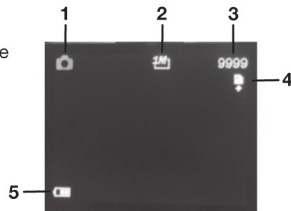



## 8.Car-carrying mode

After power is on, press Power key to enter video car-carrying mode and in preview mode, press OK key to start video recording; Press it again to stop shooting.

If the memory card is full or electrical quantity is low, it will also stop shooting:

1. Icon of mode, indicating car-carrying mode
2. Indicate size of video: HD 720P (1280x720p)  
/ VGA 640P (640x480p) is optional
3. Recording time, indicating recordable length of time
4. Icon of TF, indicating TF card is inserted
5. Icon of battery, indicating current electrical quantity



 
Open loop recording, press the OK key once under the preview state to begin recording, save a segment for recording every 3 minutes, then start to record the next segment of video. When the storage card is full, the earliest segment of video will be deleted to release the corresponding space for continuous recording.

## 9. Replay mode

9.1 After power is on and entering Preview state, press Power key continuously to shift to Replay mode. You can Press OK key about 3 seconds to 100MEDIA File.



PRESS OK KEY  
ABOUT 3 s.

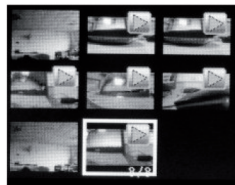


When a video file is being played, click OK key to pause play, and click Power key to stop playing.

Press Power key continuously to shift to Shooting mode.

## 10. Menu operation

 
There is a different menu in each working mode as shown in the following figures:

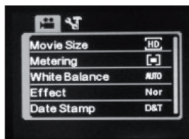

*Menu for  
recording mode*



 *Menu for  
shooting*

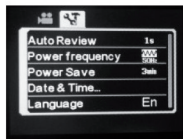

*Menu for  
setting mode*



*Menu for  
replay mode*

Operation:

Press Menu key, the menu for this mode will be displayed on the LCD.

At this time, press Power key to move the cursor leftward or rightward and select on the menu, and press Down key to move the cursor upward or downward and select on the menu in a circulating way.

Press OK key to confirm and press Menu key to return or exit from menu mode.

## **Application on PC**

The camera has a plug-and-play function.

Connect the power-on device to the computer with the USB cable, and the mode can be automatically switched to the removable hard disk. Removable disk icon will appear in the "My Computer" window.

The pictures and video files you shot stored in the removable disk H:\ DCIM\RECORDER,100MEDIA folder (H is this equipment removable disk)

Note: If using a mobile hard disk function on Windows 2000 or later versions of Windows operating system, do not install the driver.

In U-disk mode (MSDC mode), press the Shutter key to switch to web cam mode (PCCAM). The LCD will display:PCCAM

Now you can start the web cam through application. To return to U-disk mode (MSDC mode), press the shutter key again.

### **Note:**

Driver is not required for web cam mode (PCCAM mode) on Windows XP(SP3) version or above.

## TECHNICAL FEATURES:

<b>Function Modes</b>	Video recording mode / car-carrying mode / shooting mode / replay mode
<b>Lens</b>	F2.6 / f = 3.56mm
<b>LCD Display Screen</b>	1.5" HD LCD Screen
<b>Photo Definition Ratio</b>	5M (2592x1944) / 3M (2048x1536) / 1M (1280x960) / VGA (640x480)
<b>Video Definition Ratio</b>	HD: 1280x720 / VGA: 640x480
<b>Storage Media</b>	TF Card (32GB at most)
<b>File Formats</b>	Videos (AVI) / Photos (JPEG)
<b>USB Port</b>	USB 2.0 Port
<b>Power Supply</b>	External 3.7V rechargeable lithium battery 650mAh
<b>Software Language</b>	English / Chinese
<b>Dimension</b>	59mm x 41mm x 21mm

