 


# LYNX600

[www.hirecworld.com](http://www.hirecworld.com)

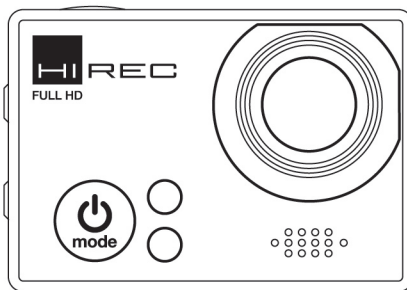 






## USER MANUAL

*English*

## *Introduction to appearance and keys*

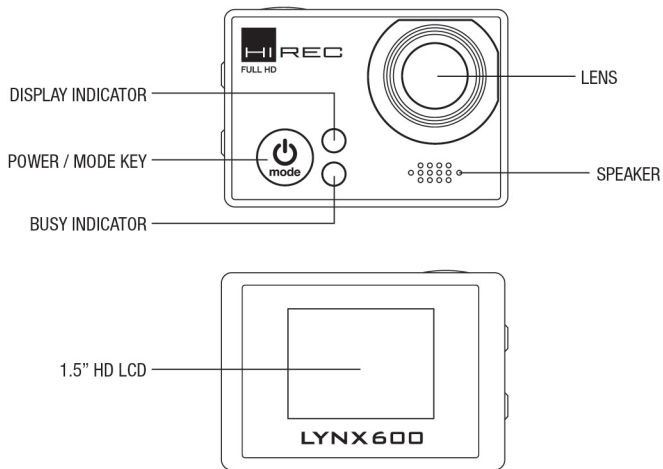


---

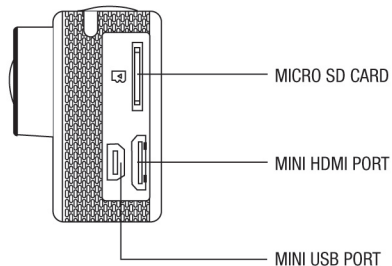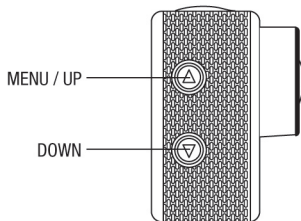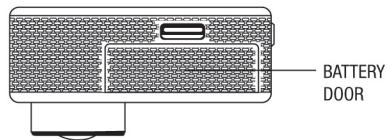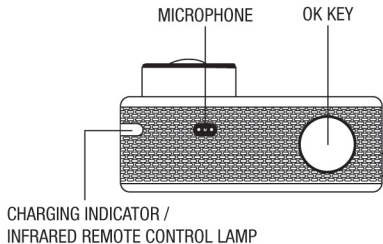    



## Select Language

 
---

1. Start the camera  press the Menu / Up Key 
2. Press mode key
3. Navigate in setting menu  and select your language

## Start using

---

### 1.Charge the built-in Lithium battery

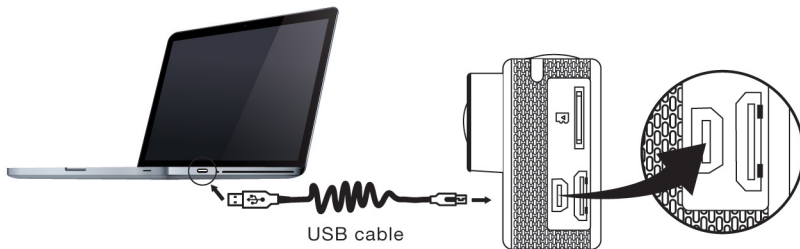


Connect the camera to the computer for charging, at this time, the charging indicator will be in red, and it will be off after charging. Generally, it takes 3-5 hours to charge the battery.

## 2. Use the storage card

 2.1. Push the TF card into the slot till it is in place as per the instruction in concavely engraved words by the storage card slot.


2.2. To take out the TF card, press the tail of the storage card inwardly softly and it will be popped out.

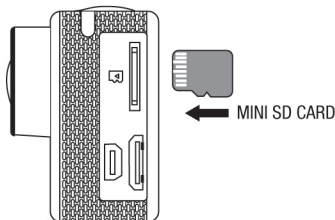

NOTE: There's no built-in memory unit in the camera, so make sure to insert a storage card into it prior to use ( it is recommended taht a TF card of better quality be used, like as class 4 speeds or better card ).



### 3.Power ON/OFF

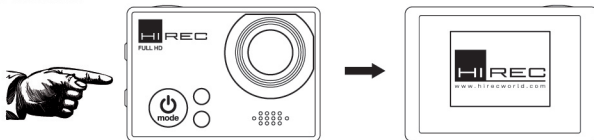 3.1.Power ON: Press Power key for 1 second, the screen will be ON, and the camera will be started.



3.2.Power OFF: Hold on Power key for 3 seconds when the camera is in the idle state to turn it off.

3.3.Auto Screen OFF: The screen will be turned off automatically when the time that the camera is in the idle state for automatic screen off to save the power.

3.4.Power off when the camera is lack of electricity. When electricital quantity of the battery is very low, an icon of  will be displayed on the LCD screen, prompting you to charge it in time. When the icon of  will be displayed on the LCD screen, the camera will be turned off automatically.

### 4.Shift among functional modes

The camera has 3 modes: namely video recording mode / shooting mode / replay mode. After power is on, press Power key to shift among them.

### 5.Indicator

Busy indicator (red): when the camera is busy such as recording videos, shooting photos the work indicator will flicker.

Display indicator (red): when the LCD screen is off, the display indicator is on; when the LCD screen is off, the display indicator is on.

 
Charging indicator (red): when it is on, the user is prompted that the camera is being charged and it will be off after charging is completed.

## 6.Video recording mode

After power is on, the video camera will enter video recording mode directly and in preview mode, press OK key to start video recording; Press it again to stop shooting.

If the memory card is full or electrical quantity is low, it will also stop shooting:

1. Icon of mode, indicating video recording mode
2. Icon of record Audio, Record Audio is on
3. Indicate size of video:1080P(30FPS) / HD 720P(60FPS) / HD 720P(30FPS) is optional
4. Recording time, indicating recordable length of time
5. Icon of battery, indicating current electrical quantity
6. Icon of TF, indicating TF card is inserted
7. Icon of open loop recording, a segment for recording every 2 minutes
8. Icon of Exposure

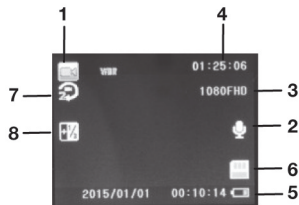


Open loop recording, press the OK key once under the preview state to begin recording, save a segment for recording every 2 minutes, then start to record the next segment of video. When the storage card is full, the earliest segment of video will be deleted to release the corresponding space for continuous recording.

## 8. Shooting mode

 After power is on, press Power key twice to enter shooting mode, and in preview state, press OK key to take a photo:


1. Icon of mode, indicating the current is shooting mode
2. Size of video, and 5M/8M/10M/12M is optional
3. Counter, indicating number of photos to be taken
4. Icon of anti-shaking
5. Icon of Exposure
6. Icon of White Balance
7. Icon of ISO
8. Icon of image quality
9. Icon of TF, indicating TF card is inserted
10. Icon of battery, indicating current electrical quantity
11. Icon of capture mode; and Single/2S timer
12. Icon of sequence; Continuous shooting three photos

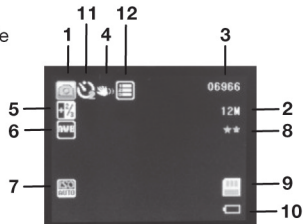



## 9. Replay mode

 9.1 After power is on and entering Preview state, press Power key continuously to shift to Replay mode.

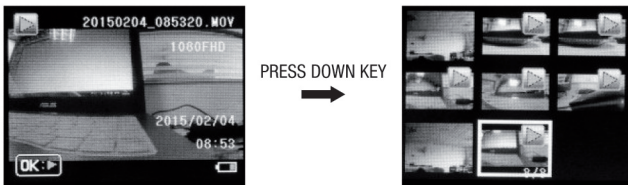

When a video file is being played, click OK key to pause play, and click Power key to stop playing.


Press Power key continuously to shift to Video recording mode

## 10. Menu operation

 
There is a different menu in each working mode as shown in the following figures:



*Menu for  
recording mode*

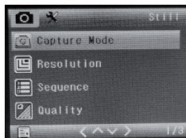

*Menu for  
shooting*

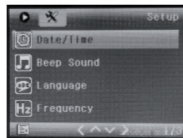 

*Menu for  
setting mode*



*Menu for  
replay mode*

Operation:

Press Menu key, the menu for this mode will be displayed on the LCD.


At this time, press Menu key again to move the cursor leftward or rightward and select on the menu, and press Down key to move the cursor upward or downward and select on the menu in a circulating way.

Press OK key to confirm and press Menu key to return or exit from menu mode.

## Application of remote controller


 
### 1. Definition of keys of remote controller

Keys of remote controller are as shown in the right figure:

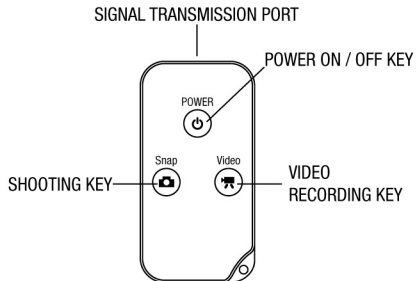


### 2. Use of remote controller:

  Using the remote controller, you can achieve functions of video recording, shooting and power off without operating on the camera. Just point the signal transmission port of the remote controller at IR signal receiving lamp of the camera, and press corresponding keys to achieve functions of power on, video recording, shooting and power off.

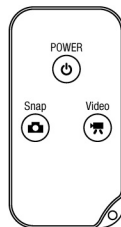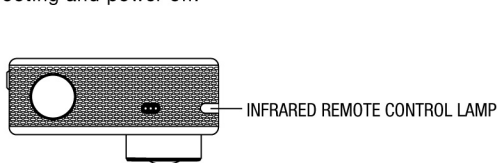

### Connect device to HDTV:

 Connect the video camera to an HDTV with a HD cable as shown in the following figure, display signals in the camera will be output into the HDTV automatically, and you can browse HD videos and photos that are recorded or taken in the HDTV.

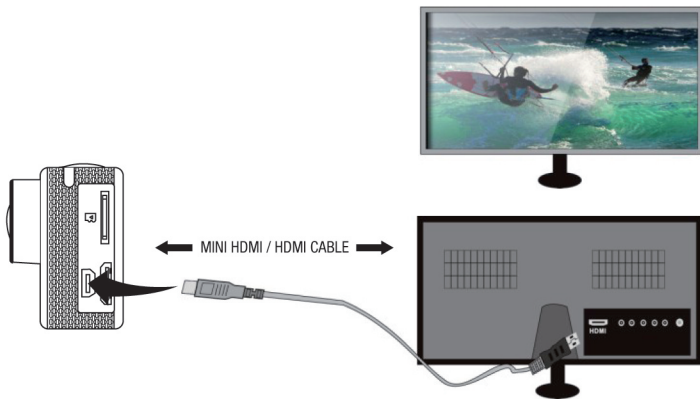

## **Application on PC**

The camera has a plug-and-play function.

Connect the power-on device to the computer with the USB cable, and the mode can be automatically switched to the removable hard disk. Removable disk icon will appear in the "My Computer" window.

The pictures and video files you shot stored in the removable disk H: \ DCIM folder (H is this equipment removable disk)

**Note:** If using a mobile hard disk function on Windows 2000 or later versions of Windows operating system, do not install the driver.

## **Web cam mode**

To remove the TF card, press the end of memory card gently, the card will be ejected. The camera connect to the computer with the USB cable, and the mode can be automatically switched to web cam mode.

### **Note:**

Driver is not required for web cam mode (PCCAM mode) on Windows XP(SP3) version or above.

## TECHNICAL FEATURES:

<b>Image Sensor</b>	5.0 Million Image Sensor
<b>Function Modes</b>	Video recording mode / shooting mode & replay mode
<b>Lens</b>	F2.8 / f = 2.5mm
<b>LCD Display Screen</b>	1.5" HD LCD Screen
<b>Photo Definition Ratio</b>	12M / 10M / 8M / 5M
<b>Video Definition Ratio</b>	FHD: 1920x1080( 30fps ) / HD:1280x720(60fps) / HD:1280x720(30fps)
<b>Storage Media</b>	TF Card (32GB at most)
<b>File Formats</b>	Videos (MOV) / H.264 Compressed Format / Photos (JPEG)
<b>USB Port</b>	USB 2.0 Port
<b>Power Supply</b>	External 3.8V rechargeable lithium battery 1050mAh
<b>Software Language</b>	English / Chinese / Portuguese / German / Italian French / Korean / Japanese / Russian
<b>Dimension</b>	59mm x 41mm x 21mm