

COMPATIBILITY

* Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices.



LYNX 730

Wi-Fi - Waterproof - Ultra HD



Wide Angle
Lens



HDMI



Ultra HD



Waterproof
to 30m



Long-lasting
Battery

THE BASICS



ACCESSORIES



Waterproof Housing



Bike Mount



Clip Mount



High Clip Mount



Universal Mount



Extension Mount



Angle Mount



High Angle Mount



Frame Mount Adapter



Frame Mount



Frame Mount Clip



Sticky Mount x2



Straps



USB Cable



Battery



 
 
 
Battery



Lens Cloth

MOUNTING YOUR CAMERA

Attach your camera to helmets, gear and equipment.

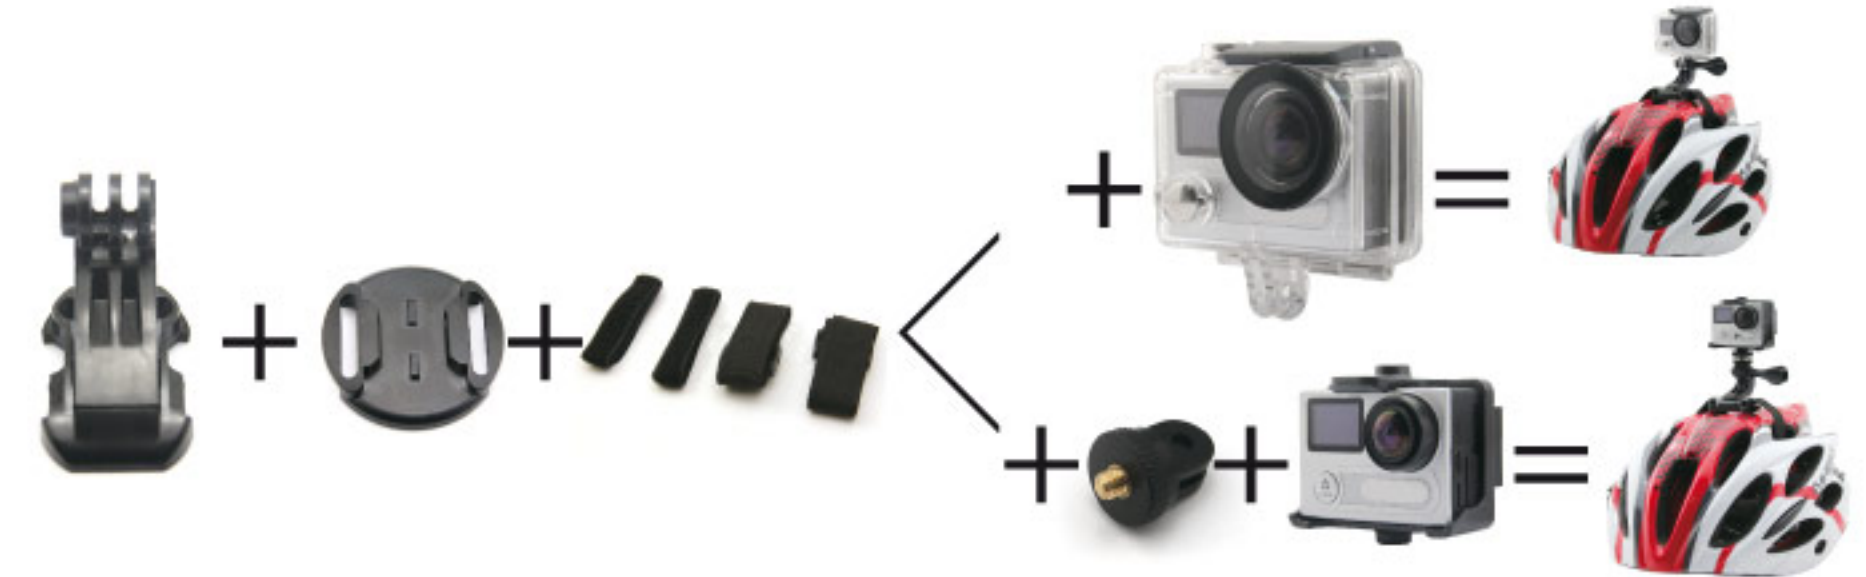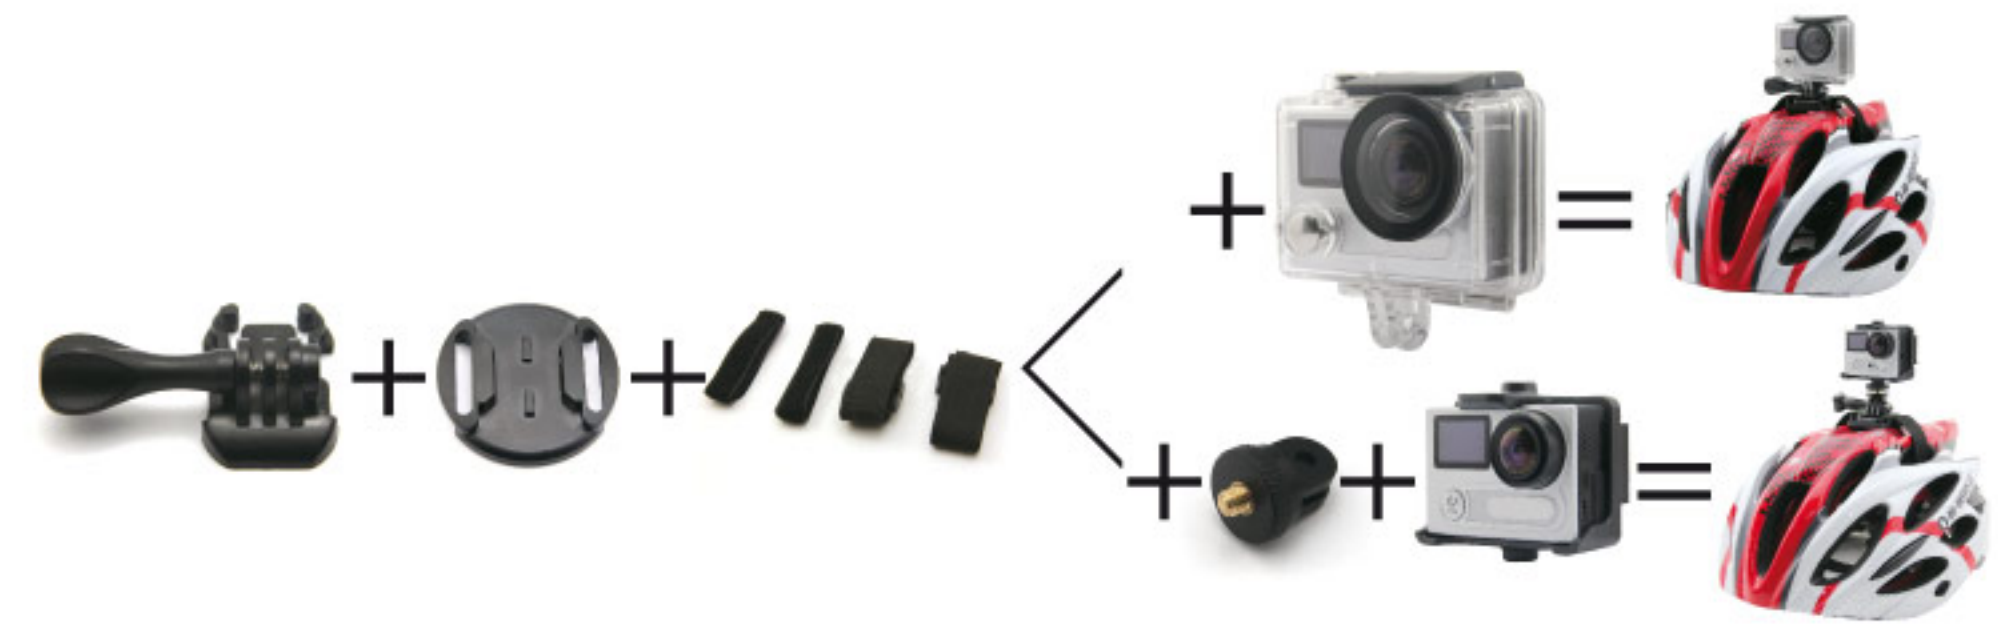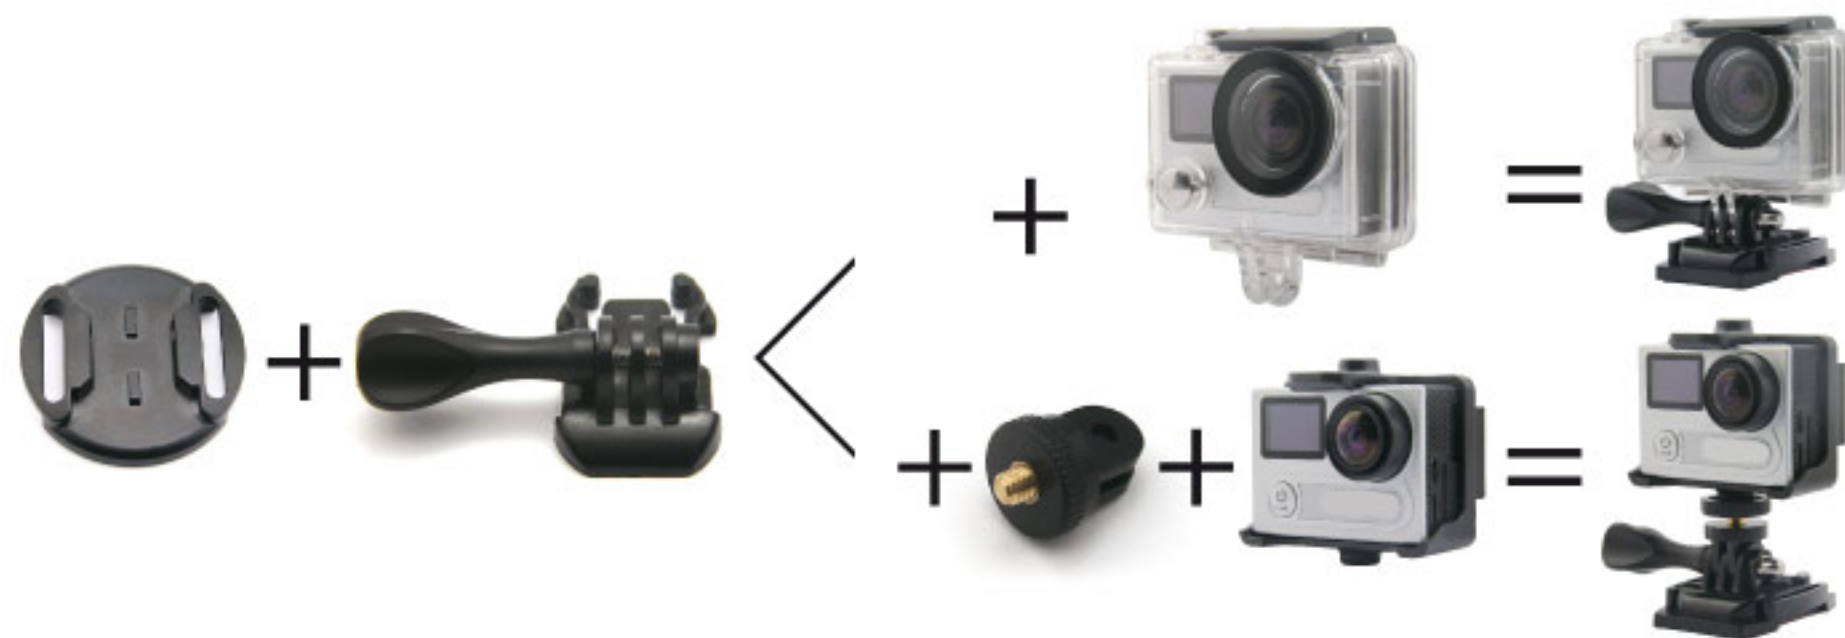

GETTING STARTED

DEAR USER,

Congratulations on your new camera and many thanks for your purchase! This user manual will help you learn the basics of capturing life's most incredible moments!

To power ON:

 
Press the **Power/Mode Button**.

To power OFF:

Press and hold the **Power/Mode Button**.

OVERVIEW

Turn camera ON and repeatedly press the Power/Mode Button to cycle through camera modes and settings. The modes will appear in following order:

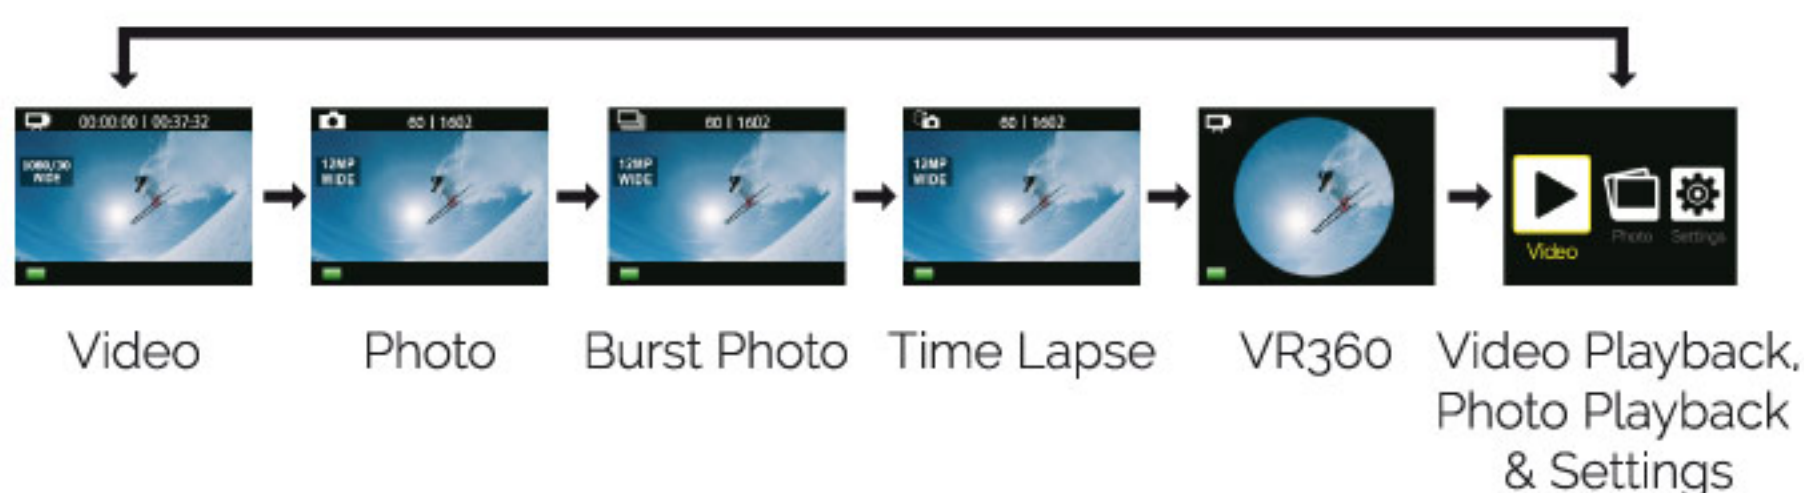

Video

Record Video



Photo

Capture a single photo



Burst Photo

Capture photo burst



Time Lapse

Shoot series of photos at set time intervals



VR 360

Record VR 360 Video

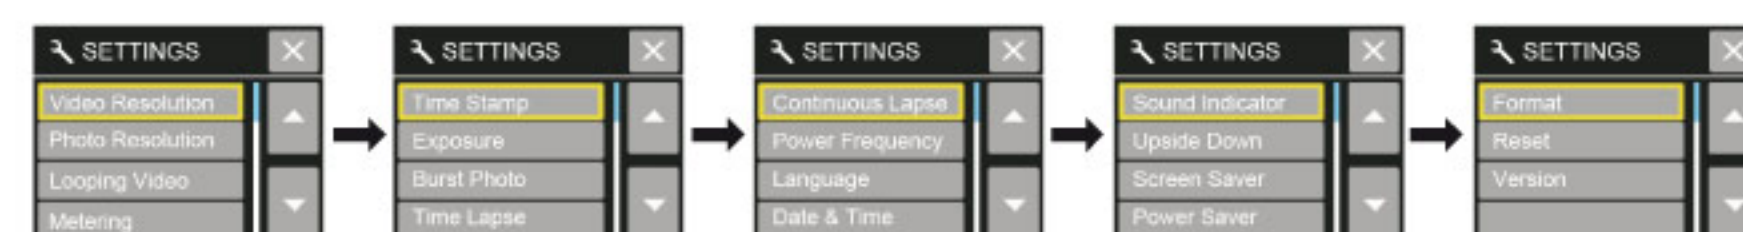 


Photo & Video playback



Adjust camera settings, resolution and more

SETTINGS



Press the **Shutter/Select Button** to enter the settings menu. Repeatedly press the **Power/- Mode Button** to cycle through options and press the **Shutter/Select Button** to select desired option. To go back to the previous screen or exit the settings menu, press the **Wi-Fi Button**.

Video Resolution:

4K25/2.7K30/1080p60/1080p30

Micro SD Card	4K25/2.7K30	1080p60	1080p30
32 GB	60 mins	120 mins	240 mins
16 GB	30 mins	60 mins	120 mins

Looping Video: Off/On 4K & 2.7K not supported)

Metering: Center/Multi/Spot

Time Stamp: Off/Date/Date & Time

Exposure: +-2.0/+-1.7/+-1.3/+-1.0/+-0.7/+-0.3/0

Photo Resolution: 12M/8M/5M/4M

Burst Photo: 3 Photos

Time Lapse: 2s/ 3s/ 5s/ 10s/ 20s/ 30s/ 60s

Continuous Lapse: Off/On

Power Frequency: 50Hz/60Hz/Auto

Language: English/Traditional Chinese/
Italian/Spanish/Portuguese/German/ Dutch/
French/Czech/Polish/Turkish/Russian/
Japanese/Korean/Thai

Date & Time: MM/DD/YY, DD/MM/YY, or
YY/MM/DD

Sound Indicator: Shutter On/Off, Start Up
1/2/3/None, Beep On/Off, Volume 0/1/2/3

Upside Down: On/Off

Screen Saver: Off/1 min/3 min/5 min

Power Saver: Off/1 min/3 min/5 min

Format: No/Yes

Reset: No/Yes

Version

VIDEO MODE



To record Video, verify the camera is in **Video** mode. If the **Video** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To start recording:

Press the **Shutter/Select Button**. The camera will emit one beep and the **Camera Status Lights** will flash while recording.

To stop recording:

Press the Shutter/Select Button. The **Camera Status Lights** stop flashing and the camera emits one beep to indicate recording has stopped.

This camera automatically stops recording when the battery is out of power. Your **Video** will be saved before the camera powers OFF.

PHOTO MODE

Photo

To capture a **Photo**, verify the camera is in **Photo** mode. If the **Photo** icon on your camera's LCD screen is not showing, press the **Power/ Mode Button** repeatedly until it appears.

To take a photo:

Press the **Shutter/Select Button**. The camera will emit the camera shutter sound.

BURST PHOTO MODE

Burst Photo

To capture a **Burst Photo** series, verify the camera is in **Burst Photo** mode. If the **Burst Photo** icon on your camera's LCD screen is not showing,

press the **Power/Mode Button** repeatedly until it appears. In **Burst Photo** mode, your camera takes 3 photos in 1.5 seconds.

To take a Burst Photo series:

Press the **Shutter/Select Button**. The camera will emit camera shutter sounds.

TIME LAPSE MODE

Time Lapse

To capture a **Time Lapse** series, verify the **Continuous Lapse** is **ON** and camera is in **Time Lapse** mode. If the Time Lapse icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Time Lapse** mode, your camera captures a series of photos at **2,3,5,10,20,30** or **60** second intervals.

To take Time Lapse:

Press the **Shutter/Select Button**. The camera initiates countdown and emits the camera shutter sound each time a **Photo** is taken.



VR 360 VIDEO

To record **VR360 Video**, you have to download the **Ez iCam App** to your smartphone at the Apple App Store in advance.

To start recording:

1. Verify the camera is in **VR360 mode**.
2. Press the **Wi-Fi Button** to turn on **Wi-Fi**.
3. In your smartphone's **Wi-Fi settings**, connect to the network called "**ICAM-LYNX730-VR**" followed by a series of numbers.
4. Open the **Ez iCam App** on your smartphone.
5. Chose your Action camera on the device list.
6. Press the **Red Record Button** to start recording.

Playing Back VR360 Videos*

1. Go to the Album  on the Ez iCam App.
2. Press the **Playback button**  at the bottom of each **VR360 video**.

*This **VR360** feature is only supported on Ez iCam Playback

PLAYBACK

Playing Back Videos and Photos

To enter the Playback menu:

1. Press the **Power/Mode Button** to select **Video** or **Photo**.
2. Press the **Shutter/Select Button** to enter the **Playback** menu.
3. Use **Power/Mode Button** to cycle through the various options.
4. Press the **Shutter/Select Button**.
5. To return to the **Playback menu**, press the **Wi-Fi Button**.

STORAGE/MICRO SD CARDS

This camera is compatible with **16GB**, and **32GB** capacity **microSD**, **microSDHC**, and **microSDXC** memory cards. You must use a **microSD** card with a **Class 10 speed** rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

BATTERY

Charging The Battery

To charge the battery:

1. Connect the camera to a computer or USB power supply.

* Charging Time: 5 hours

CAMERA APP

Connecting to the Ez iCam App (4K & 2.7K not supported)

The **Ez iCam App** lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of selected content and more.

1. Download the **Ez iCam App** to your smartphone or tablet at the **Google Play** or **Apple App Store**.
2. Press the **Power/Mode Button** to power the camera **ON**.
3. Make sure the camera is in **Camera mode**.

4. Press the **Wi-Fi Button** to turn on the **Wi-Fi**.*

5. In your smartphone or tablet's Wi-Fi settings, connect to the network called **ICAM-Lynx730** followed by a series of numbers.

6. Open the **Ez iCam App** on your smartphone or tablet.

* Press and hold the **Wi-Fi Button** for three seconds to turn **OFF Wi-Fi**.

The **Ez iCam App** is compatible with the smartphones and tablets listed below.

For Apple iOS:

- * iPhones, 5s, 6 (Plus), & Gs (Plus) (iOS9)
- * iPad Air & Mini (iOS9)

For Android:

- * Android 4X Quad-core devices



iOS / Android
App Download