

2.4G REMOTE





2.4G Remote




Splashproof



Long-lasting battery

2.4G Remote

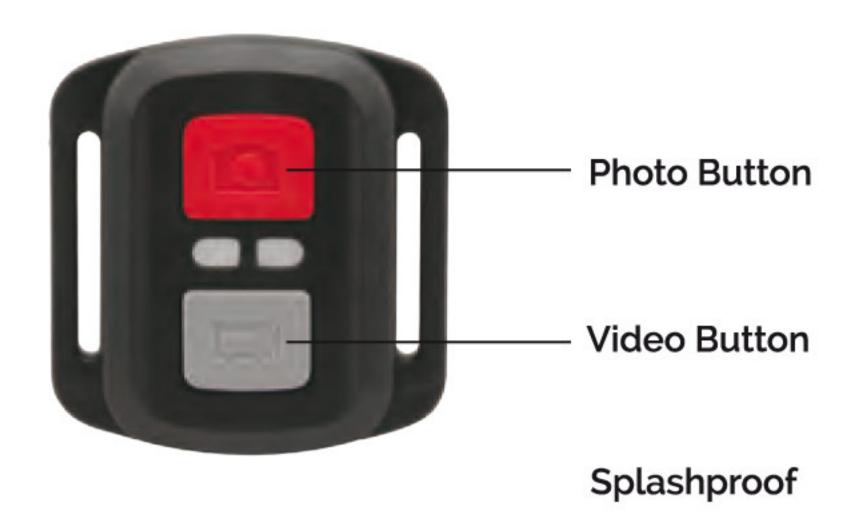



To record **Video**, verify the camera is in **Video** mode.

To start recording:

Press the **Grey Video Button**. The camera will emit one beep and the **Camera Light** will flash while recording.

To stop recording:

Press the **Grey Video Button** again. The camera will emit one beep and the **Camera Light** will stop flashing while recording.



To capture a **Photo**, verify the camera is in **Photo** mode.

To take a photo:

Press the **Red Photo Button**. The camera will emit a camera shutter sound.



To capture a **Burst Photo** series, verify the camera is in **Burst Photo** mode.

To take a Burst Photo series:

Press the **Red Photo Button**. The camera will emit camera shutter sounds.

Time Lapse

To capture a **Time Lapse series**, verify the Continuous Lapse is **ON** and camera is in **Time Lapse** mode.

To take Time Lapse:

Press the **Red Photo Button**. The camera initiates countdown and emits a camera shutter sound each time a **Photo** is taken.

*To power OFF camera:

Press and hold the Red Photo Button.

Once the camera is powered off, it can not be powered back on with the RC.